

Installing the YOYO

IMPORTANT

When using Yoyo for the first time, the following alarm is likely to activate

Ma18 for machines equipped with the 2004 PCB, or

Ma13 for machines equipped with the 2007 PCB.

Ma18 :

italiano	english	español	deutsch
Versione modulo CAN	Version module CAN	Version modulo CAN	Version modul CAN

français
Version module CAN

Ma13 :

italiano	english	chinese	türkçe
Versione Sw	Version Sw	版本	Versiyon
YOYO	YOYO	YOYO	Software YOYO
non compatibile	not compatible	不匹配	imkansız

русский	español	français	deutsch
Версия YOYO	Version Sw	Version Sw	Version Sw
несовместима	YOYO	YOYO	YOYO
	no·compatible	pas·compatible	Inkompatibel

On the machines equipped with a 2007 PCB the switch is positioned at the front.
In previous versions with a 2000 PCB or a 2004 PCB, the switch is positioned laterally.

The alarm indicates that the YOYO software is not compatible with the EPROM software, or vice versa. If the Yoyos have been purchased together with the machine, you only need to configure them with the relevant file supplied.

If the Yoyos have been purchased separately, log on to www.Lonati.com in the Technical support section and download the Yoyo software, compatible with your Eprom version.

When the *.up file is available
activate Programming

1. load the file into the memory
2. and activate the file.

Operations can also be performed from the Alarm window: see attached instructions.

Management keys in the Alarm window



In the alarm window of pantyhose machines ("Donna") equipped with the 2004 PCB

pressing key	[H]	you go to the	<i>Writing module Flash</i>	menu
pressing key	[F]	you go to the	<i>Reading file from disk</i>	window

Follow the instructions on the next pages.

In the alarm window of all machines equipped with the 2007 PCB

pressing key	[Space]	you go to the	<i>Alarm menu</i>
--------------	---------	---------------	-------------------

Follow the instructions on the next pages.

Load and Activate a file .up from the Alarm window for machines equiped with PCB 2004

Connect Fdu-2 / Fdu-3 to the machine.
Put in the floppy disk / the pen drive containing the *.UP file.
Refer to the table below for next operations.

1. **Load** the file in memory.
2. **Enable** the file.
The machine will begin updating. It will automatically go off and then on again.
3. Wait for MA20 alarm*, then switch the machine off and then on again to start the new software.

N.B. The file *.up is cancelled automatically after activation.

Sequence of keys to load and activate the file .UP, starting from the alarm window

Update using FDU

	action	path		
			Donna	
1	loading		[F] , [↑] / [↓] , [ENTER]	
2	activation		[H] , [↑] / [↓] , [ENTER]	

* Ma20 :

italiano	english	chinese	türkçe
Eseguito	Update OK.	升级	Makinayi
aggiornamento	Switch the	执行	söndürün.
Spegnere macchina	machine OFF	关机	Güncelleme ok.
русский	español	français	deutsch
Выполнено	Ejecutado	Execute	Naubearb
обновление	actualizacion	actualisation	OK.maschine
ВЫКЛЮЧИТЬ МАШИНУ	Apagas maquina	Eteindre machine	ausschalten

Load and Activate a file .up from the alarm window for machines equiped with PCB 2007

Connect Fdu-2 / Fdu-3 to the machine.
Put in the floppy disk / the pen drive containing the *.UP file.
Refer to the table below for next operations.

1. **Load** the file in memory.
2. **Enable** the file.
The machine will begin updating. It will automatically go off and then on again.
3. Wait for MA20 alarm*, then switch the machine off and then on again to start the new software.

N.B. The file *.up is cancelled automatically after activation.

Sequence of keys to load and activate the file .UP, starting from the alarm window

Update using FDU

	action	path		
		Goal	Donna	Bravo
1	loading	[SPACE] , [D], [B]	[SPACE] , [E], [E]	[SPACE] , [C], [C]
2	activation	[SPACE] , [D], [C]	[SPACE] , [C], [D],	[SPACE] , [C], [I]

Update using the Pen drive

	action	path		
		Goal	Donna	Bravo
1	loading	[SPACE] , [D], [A]	[SPACE] , [G], [E]	[SPACE] , [D], [C]
2	activation	[SPACE] , [D], [C]	[SPACE] , [C], [D],	[SPACE] , [D], [I]

* Ma20 :

italiano	english	chinese	türkçe
Eseguito	Update OK.	升级	Makinayi
aggiornamento	Switch the	执行	söndürün.
Spegnera macchina	machine OFF	关机	Güncelleme ok.
русский	español	français	deutsch
Выполнено	Ejecutado	Execute	Naubearb
обновление	actualizacion	actualisation	OK. maschine
ВЫКЛЮЧИТЬ МАШИНУ	Apagas maquina	Eteindre machine	ausschalten